

Restoring Default Setting

You can use any of the following to restore factory default setting at any time:

- Printer button;
- Printer portal (**Web** page);
- SDT.

Using printer button to restore default setting

The easiest way of restoring default setting of the printer is to use the printer button.

1. Switch off the printer;
2. Press the handle on both sides of the printer to open its cover;
3. Switch on the printer;
4. When the **LED** status light shows flickering green light, press the printer button until the **LED** light is off;
5. Make sure that the medium is correctly installed;
6. Close the printer cover.

Note: Using the printer button to restore default setting will also reset the printer's current '**Network Settings**'; '**User-Installed Files**' and '**System Setting**'.